

# Sew gift bags

Instructions No. 2891

Difficulty: Beginner 🍴🍴🍴🍴

Working time: 2 Hours 30 Minutes

Do you want to wrap your gifts creatively or are you still looking for a nice storage idea for your nuts? Then the **Christmas sacks** are just the thing. They are easy to sew and can be used after unwrapping the gift and look decorative.



## This is how you sew the bags:

Cut the following for the respective sizes of the **bags**:

The large bag: Inner & outer fabric = 50 x 42 cm + 1 cm seam allowance

The small bag: Inner & outer fabric = 40 x 25 cm + 1 cm seam allowance

Cut the **fabrics** to the above dimensions. For a fabric with motifs, such as our fabric with the forest animal motifs, make sure that the motifs are shown along the width.

Place the fabrics right sides together on the wide side and sew. **Important:** The motifs must be upside down when unfolding the fabric.

Press the seam open. Unfold the fabric. The seam is now horizontal and the right side of the fabric can be seen.

Now fold the fabric in half. Sew together all the way around, leaving a turning opening on the wide side of the inner fabric.

Now create the bottom with the inner and outer fabric. To do this, fold the fabric so that the long seam is in the middle and the lace form a square. Now sew along the lace. This seam is 8 cm for the large bag and 6 cm for the small bag. The lace are then cut off about 1 cm along these seams.

The fabric can now be turned. The turning opening is closed by hand or close the edge with the sewing machine.

Finally, fill the bags and close them with the satin ribbons. Decorated with jingles, they look even more Christmassy and beautiful.



## New instructions

Straight to your inbox every week

register now >

Article information:

Article number	Article name	Qty
389518	Cotton fabric "Country Cotton", nature	1
610940	Jingles, 15 mm, gold	1
21523	VBS Satin ribbon "Christmas Time"	1